

# **DCACE20R**

## Air Circulator w/Electronic Controls, Timer & Remote



### INSTRUCTION MANUAL

PLEASE READ THE INSTRUCTION MANUAL CAREFULLY BEFORE USING THE UNIT.

WARNINGS AND PRECAUTIONS	1
STRUCTURE	3
OPERATION	4
CLEANING AND MAINTENANCE	7
TECHNICAL REFERENCE DATA	9
WARRANTY	9

## Warnings

- Never place the unit near gas appliances, flames or flammable liquids.
- Never hit or shake the unit. Doing so may cause damage.
- Never cover or obstruct the air inlet or outlet. Doing so may cause overheating.
- Never spray water on or place the unit near water. Doing so may cause electric shock.
- Never connect other appliances to the same power outlet.
- Never connect or disconnect the power plug with wet hands. Doing so may cause electric shock.
- Never insert fingers or objects through the guards when the unit is operating.
- Never use an extension cord.
- Always have a professional technician, manufacturer or service agent replace a damaged power cord.

 
## Precautions

- This appliance is for indoor use only.
- Do not use the unit near windows or where water collects. Rain and water collection may lead to a risk of fire or electric shock.
- Do not place the unit in a damp place or where humidity is high (such as a bathroom).
- Do not leave the unit operating while unattended.
- Do not place the unit in direct sunlight to avoid surface discolouration.



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Avoid electromagnetic interference. Keep the unit at least 1 metre away from electric appliances such as televisions and radios.
- Avoid scratching and damaging the surface. Do not use chemical solvents (i.e. Benzene, alcohol) to clean the surface.
- Place the unit on a stable surface when operating.
- Unplug the unit before cleaning, servicing or maintenance.
- Electrical connections must be in accordance with National or
- Local Codes.
- The rear of the unit must be at least 50cm away from the wall.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

# STRUCTURE

1. Base
2. Buttons
3. LED indicator light
4. Remote receiver
5. Brand badge
6. Front grille
7. Remote control/holder
8. Rear housing
9. Fan body
10. Fan body
11. Power cord

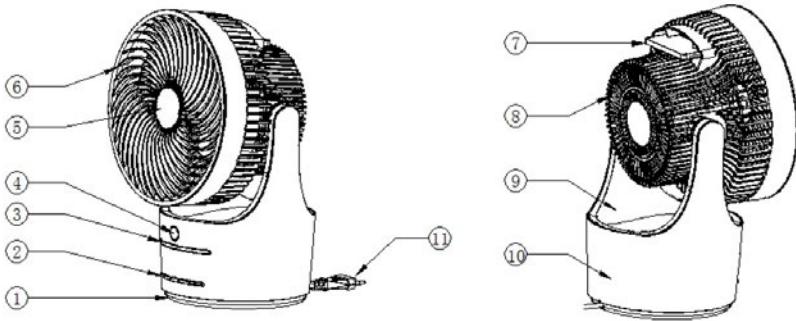


CONTROL PANEL & REMOTE

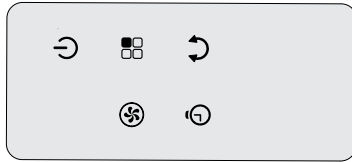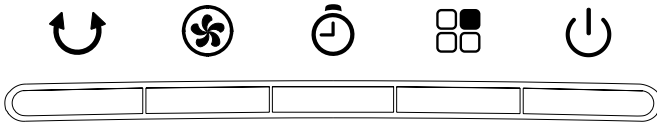  

- Oscillation button
- Fan Speed button
- Timer button
- Mode button
- On/Off button

 
INDICATOR LIGHTS

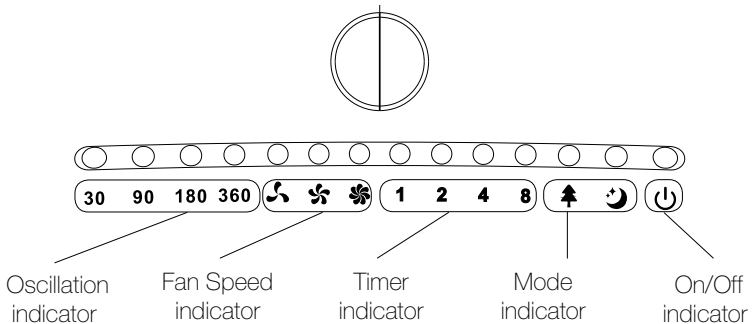

## REMOTE CONTROL

The remote control can be used to operate all functions.

 1. Remove the battery cover at the back of remote control (Picture 2).
2. Insert the 3V CR2032 battery.
3. Replace the battery cover.

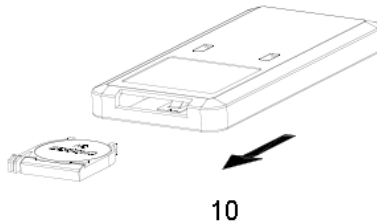

## ON / OFF

This button is used to switch the unit on and off. By simply pressing the button, you can turn the unit on or off. Once turned on, default mode is Normal Mode & Low Speed.

## FAN SPEED

This button is used to select the desired fan speed – Low, Med, or High. The fan speed indicator light will illuminate indicating what speed has been selected. Press once for low speed, press twice for medium speed, press three times for high speed. Pressing again in high speed, will return to low speed.

## MODE

This button is used to switch between pre-set operating modes. By simply pressing the button, you can regulate the mode from NORMAL, NATURAL or SLEEP depending on your needs. The unit automatically starts in NORMAL mode.

**Normal Mode:** Operates normally with the selected wind speed – Low, Med, High.

**Natural Mode:** The fan speeds automatically shift through High, Med, Low speed to imitate a natural wind speed rhythm.

**Sleep Mode:** The fan automatically lowers the set wind speed in 30 minute intervals. E.g. High speed: 30mins -> Med speed 30mins -> Low speed 30 mins.

## TIMER

This air circulator comes with an 8 hour timer that allows you to pre-set the unit to switch off automatically, in intervals of 1, 2, 4 or 8 hours.

To operate, simply select the number of hours ahead you wish the unit to switch off and the respective indicator lights will illuminate. If you'd like the unit to run continuously, ensure no timer indicator lights are illuminated.

## OSCILLATION

Press the oscillation button to activate 360° Horizontal oscillation. Press again to deactivate.

## 90° VERTICAL OSCILLATION

Tilt the fan head to achieve up to 90° angled oscillation. Ensure the fan is OFF when adjusting the fan head position.



1. Remove the unit from its packaging
2. Plug the unit into a power outlet, a 'beep beep' will sound and the unit will be in standby mode.
3. Press the "On/Off" button to turn the unit On.
4. Press the "Fan Speed" button to change the fan speed (low, med, high).
5. The unit defaults in "Normal" mode. Press the mode button to change to Natural or Sleep Mode.
6. The unit will operate initially on a continual basis. If a set period of operation is required, please follow "TIMER" instructions on page 6.
7. To activate 360° oscillation, press the oscillation button. To turn off oscillation, press again.
8. To switch the unit off at any time, press the "On/Off" button.

## CLEANING

Over time, dust can accumulate on the rear grille cover and fan blades, which can affect the fans performance. It is recommended to clean the fan at least once a month.

1. Turn the unit OFF and disconnect the appliance from the power supply.
2. Remove any dust build up with a soft brush.
3. Wipe the surface of the unit with a soft damp cloth. Mild detergent can be used for any stubborn marks.

## IMPORTANT

The control panel and other parts must not come into contact with water or any other liquids.



- Do not dispose of electrical appliances as unsorted municipal waste.
- Use separate collection facilities.
- Contact your local government for information regarding the collection systems available.
- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and well-being.

## MAINTENANCE

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

MODEL NO.	DCACE20R
Rated Power	45W
Voltage/Frequency	220-240V/50Hz
Net Weight	1.9kg
Dimensions Body (HxWxDmm)	340 x 225 x 203.5
Dimensions Packaging (HxWxDmm)	350 x 240 x 240
RCM	5336

**WARRANTY**

The warranty period is 12 months from the date of purchase. For service advice, please contact the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

**Glen Dimplex Australia Pty Ltd**  
**1340 Ferntree Gully Road,**  
**Scoresby 3179, Victoria**  
**Australia**  
**Ph: 1300 556 816**

**Glen Dimplex New Zealand Ltd**  
**38 Harris Road, East Tamaki,**  
**Auckland 2013**  
**New Zealand**  
**Ph: 0800 666 2824**