

DHCER24SW



Senses its surroundings to increase efficiency

Movement Sensor Mode

If no movement is detected within 15 minutes the heater goes into standby mode until it detects movement again. This mode can be turned off. Never worry if you've accidentally left your heater on.

Eco Mode

When ECO mode is selected the unit will automatically adjust to suitable settings according to the room temperature. When the room temperature is below 18 degrees Celsius, the unit will operate in HIGH power and when the room is above 18 degrees Celsius the machine will operate in LOW power. When the room reaches 22 degrees Celsius the unit will stop working until the room temperature decreases and will then start working again.

- 2.4kW Heat output
- Eco mode
- Electronic thermostat
- Overheat safety cut-out
- Tip over switch
- Oscillating base
- 24 Hour timer
- Remote control

Model	DHCER24SW
Dimensions (mm)	215(w) x 224(d) x 686(h)
Wattage (watts)	2400
Thermostat Control	Yes
Finish	White
Remote Control	Yes
Warranty	2 years